



Transmitters and receivers are available in the following frequency range:

Frequency range	Bandwidth	Number of frequencies
806.125 - 809.750 MHz	4 MHz	max. 30

Transmitters and receivers have 8 frequency banks respectively. Each of the channels in the frequency banks has been factory-preset to a frequency. These frequency presets within one frequency bank are intermodulation-free. They cannot be changed.

The table printed on the back side lists the frequency presets in the frequency banks **1** to **8**.

Conditions and restrictions for using frequencies

There may be special conditions and restrictions for using frequencies in your country.

Before putting the product into operation, find the information for your country at the following address:

www.sennheiser.com/frequency-information

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany, www.sennheiser.com
Publ. 10/20, 587420/A02

Frequenzbereich / Frequency range

JB 806.125 – 809.750 MHz

